

# *LONPOO*

DVD Player

LP-099



## **USER'S MANUAL**

To assure the product to work in best status  
Please read the user's manual carefully before operation and keep it well for future use



## SAFETY WARNING



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



### **WARNING:**

TO REDUCE THE RISK OF ELECTRIC SHOCK,  
DO NOT EXPOSE THIS PRODUCT TO RAIN OR  
MOISTURE.

EN

**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrocution to persons.



The exclamation point within an equilateral triangle is intended to alert user to the presence of important operation and service instructions in the literature accompanying the appliance.



**CAUTION:** Laser radiation when open. Do not stare into beam.

**CAUTION:** USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

### Important Safety Instructions

- Read and Keep these instructions.
- Heed all warnings and follow all instructions.
- Do not place this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install it in accordance with the manufacturer's instructions.
- Do not install this product near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Use only the type of power source indicated on the marking label. If the provided plug does not fit into your outlet consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.



## CAUTION

### UNIT

- This unit utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

### PLACEMENT

- To reduce the risk of fire, electric shock or product damage,
  - Do not install or place this unit in a bookcase, built-in cabinet or in another confined space.
  - Ensure this unit is well ventilated.
  - Do not obstruct this unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.
  - Do not place sources of naked flames, such as lighted candles, on this unit.

### BATTERIES

- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.
- Mishandling of batteries can cause electrolyte leakage and may cause a fire.
  - Do not mix old and new batteries or different types at the same time.
  - Do not heat or expose to flame.
  - Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
  - Keep the AAA R03 batteries out of reach of children to prevent swallowing.
  - Do not take apart or short circuit.
  - Do not recharge alkaline or manganese batteries.
  - Do not use batteries if the covering has been peeled off.
  - Remove batteries if you do not intend to use the remote control for a long period of time.Store in a cool, dark place.

CAUTION-VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN.  
DO NOT STARE INTO BEAM.

FDA 21CFR / CLASS II (IIa)

(Inside of product)

# TABLE OF CONTENTS

EN

## GENERAL INFORMATION

Safety Warning	1
Caution	2
Product Features	4
Package Contents	4
Playable Medias	4
Unit and Disc Care	5
Disc Handling Precautions	5
Inserting the Batteries	5

## SYSTEM CONNECTIONS

Power source	6
Video connection	6
Audio connection	6

## PRODUCT OVERVIEW

Front View	7
Back View	7

## REMOTE CONTROL GUIDE

Remote Control	8-9
----------------	-----

## USING YOUR DVD PLAYER

Powering your DVD player	10
--------------------------	----

## CHANGING THE PLAYER SETTINGS

Using the Setup menus	11
Setup menu options	11
Menu and sub-options	11
Audio Setup	12

## TROUBLESHOOTING

Troubleshooting	13
-----------------	----

## SPECIFICATIONS

Specifications	14
----------------	----

## WARRANTY CARD

Warranty Card	15
---------------	----

# GENERAL INFORMATION

EN

## Product Features

Your **LP-099** is designed for reliable and trouble free performance, we wish you great satisfaction in using it.

### Main Features

- Fully compatible with DVD, DVD-R/RW, VCD, CD, CD-R/RW, PICTURE-CD, etc.
- Up-converts DVD video to Full-HD 1080p with fine details.
- USB 2.0 input.
- Full functional remote control.
- Automatic screen protection.
- PAL/Auto/NTSC optional.
- Universal power supply: AC 100-240V~, 50/60Hz.

### Input Terminals

- USB Port.

### Operation Functions:

- Repeat, A-B repeat play function
- Multi-level picture zoom
- Multi-grade fast or slow motions, multi-angle play
- Adjustable screen aspect ratio (4:3 or 16:9)
- FWD / REV, slow motion and single-step play
- Resume / memory play function

### Output Terminals

- HDMI output
- Coaxial digital audio output
- Composite video output
- Left / Right stereo audio outputs

## Package Contents

- |                  |   |
|------------------|---|
| • DVD player     | 1 |
| • HDMI cable     | 1 |
| • Remote control | 1 |
| • User's manual  | 1 |
| • RCA cable      | 1 |

## Region Codes

DVD-Video  
This unit plays DVD-Video marked with labels containing the region number "1", "2", "3", "4", "5", "6", or "ALL".

## Playable Medias

You can play back the following medias:	
<b>DVD Video</b>	DVD-Video format
<b>DVD-R</b>	DVD-Video format
<b>DVD-RW</b>	DVD-Video format
<b>CD-Audio</b>	CD-DA, Video CD, Super Video CD
<b>CD-R</b>	CD-DA, JPEG, MP3,
<b>CD-RW</b>	Video CD, Super Video CD
<b>USB</b>	MP3, JPEG

### NOTE

- It may not be possible to play the medias in some cases due to the type of media, the condition of the recording, the recording method and how the files were created.  
(For USB devices)
- This unit does not guarantee connection with all USB device.
- This unit does not support USB device charging.
- FAT and FAT32 file systems are supported.

## GENERAL INFORMATION (Cont.)

- This unit supports USB2.0 High Speed.
- This unit supports an HDD formatted in FAT32. If the HDD is not recognized, the power to the HDD may not be supplied, supply power from an external source.

### Unit and Disc Care

#### Clean this unit with a soft, dry cloth.

- Never use alcohol, paint thinner or benzene to clean this unit.
- Before using chemically treated cloth, read the instructions that came with the cloth carefully.
- Cleaning of the lens is generally not necessary although this depends on the operating environment.
- Do not use commercially available lens cleaners as they may cause malfunction.

#### Clean discs

- Wipe with a damp cloth and then wipe dry.



### Disc Handling Precautions

- Handle discs by the edges to avoid inadvertent scratches or fingerprints on the disc.
- Do not attach labels or stickers to discs.
- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not use the following discs:
  - Discs with exposed adhesive from removed stickers or labels (rented discs etc.).
  - Discs that are badly warped or cracked.
  - Irregularly shaped discs, such as heart shapes.
- The digital audio content side of a DualDisc does not meet the technical specifications of the Compact Disc Digital Audio (CD-DA) format so playback may not be possible.

EN

### Inserting the Batteries

**Insert 2 AAA batteries (not supplied) into the battery compartment of the remote control before using it.**

1. Slide to remove the cover of the battery compartment.
2. Insert the batteries with their poles (+ and –) matching those marks in the remote control's battery compartment.
3. Slide back the cover of the battery compartment.

 
**TIP:**

***To use the remote control, point it directly towards the remote control sensor on the front panel of the DVD player.***

# SYSTEM CONNECTIONS

## Power source

Use the AC line cord provided for operation on AC power. Insert the AC cord plug into a standard 100-240V~ 50/60Hz AC outlet. If you cause a static discharge when touching your player and your player fails to function, unplug your player from the AC outlet and plug it back in. Your player should return to normal operation.

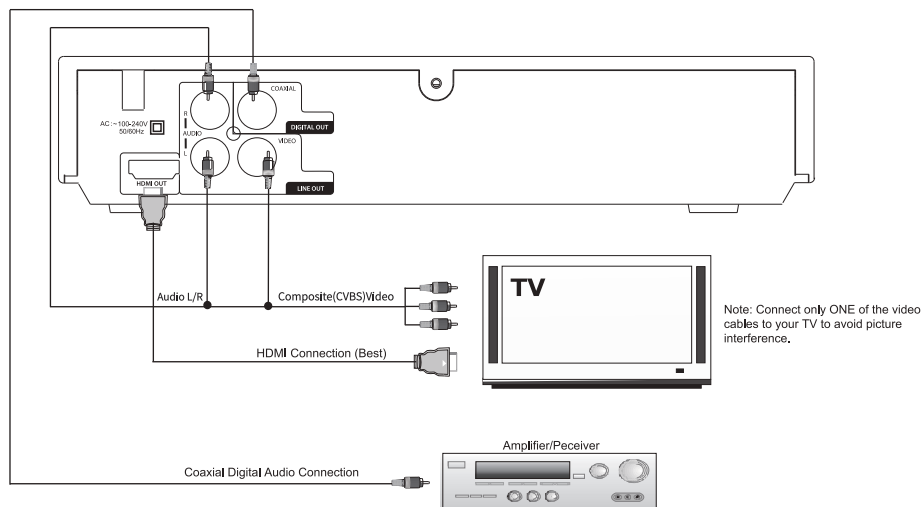

## Video connection

### Caution:

Do not plug in the AC power plug until you have finished making the system connections.

### To connect to your TV with a video cable:

- Connect one of the **VIDEO OUT** jacks (HDMI, or composite) on your player to the corresponding **VIDEO IN** jack on the TV (see illustration)

## Audio connection

### To connect to your TV with audio source:

- Connect the left and right **AUDIO OUT** jacks on the back of your player to the audio left and right in jacks on the **TV** using the supplied audio cables. (No need of the above audio connection in case of HDMI connection).

 
### To connect a two-channel digital stereo or A/V receiver with multi-channel decoder:

- Connect your player's **COAXIAL DIGITAL AUDIO OUT** jack to the corresponding in jack on your amplifier. Use an coaxial digital audio cable (not supplied).



# PRODUCT OVERVIEW

## Front View

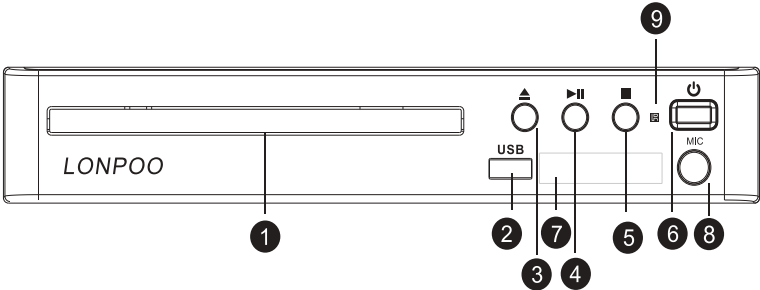

EN

- 1. Disc tray**  
When inserting a disc, ensure that it's label side is facing the right way up.

**2. USB port**  
Connects a USB device.

**3. OPEN/CLOSE ▲**  
Opens/closes the disc tray.

**4. Play / Pause ►||**  
Starts or pauses playback.
- 5.STOP ■**  
Stops playback.


**6. Power button ⏻**  
In standby mode, the unit is still consuming a small amount of power.

**7.LED Display**

 **8.MIC**

**9.Remote Control Receiver**

## Back View

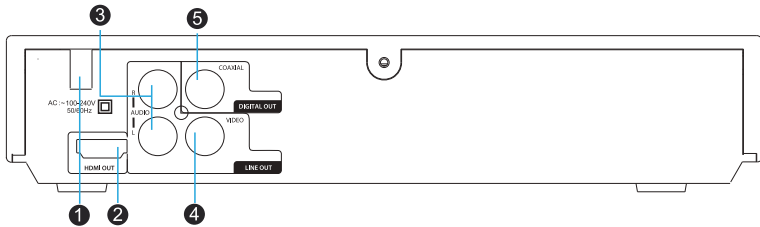

1. Power-supply cord


2. HDMI out

5 Coaxial digital audio output
3. Left/Right audio outputs

4. Composite video output

# REMOTE CONTROL GUIDE

 EN

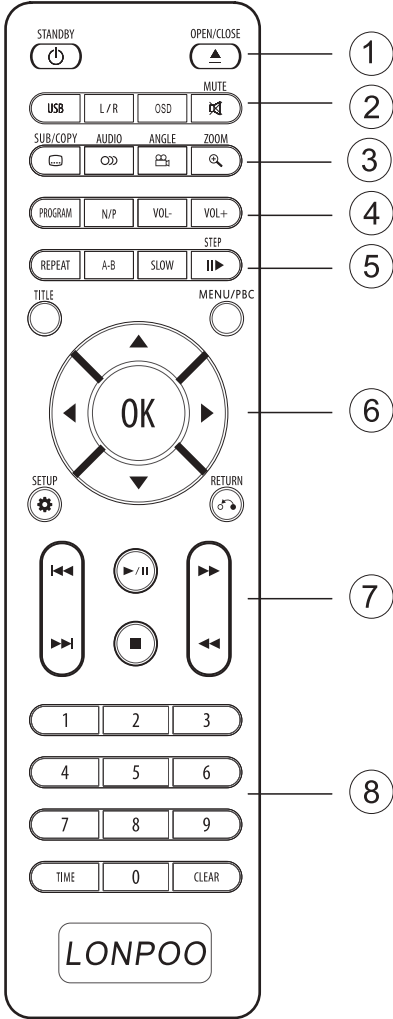

- ① **Standby/Power On switch**   
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- ② **OPEN/CLOSE**   
Opens/closes the disc tray.
- ③ **DISC/USB**  
Switches to the USB mode / Returns to the disc mode
- L/R**  
Use for VCD or CD discs. Press button to select left or right channel, or stereo
- OSD**  
Press for information of the disc to display
- MUTE**   
Press to enable/disable the audio output.
- ③ **SUBTITLE**   
Shows and selects different subtitle.
- COPY**  
Downloads music contents from loaded CD disc to inserted USB drive.
- AUDIO**   
Changes soundtracks.
- ANGLE**   
Switches the camera angle.
- ZOOM**   
Magnifies/shrinks the image up to four times the original size, scroll using .

# REMOTE CONTROL GUIDE (Cont.)

EN

## ④ PROGRAM

Sets the playback order.

1. Press ◀ ▶ ▲ ▼ to select the item.
2. Press 0 to 9 to specify the 2-digit order.  
e.g.,    5:       0 → 5  
          15:    1 → 5

To cancel: Press CLEAR.

3. Press ◀ ▶ ▲ ▼ to select Start, press OK to start programmed playback.
4. Press STOP ■ twice to clear the whole program.

### N/P

Press to switch the TV system between NTSC and PAL.

### GO-TO

Specifies the point of time where you would like to start playback.

### CLEAR

Clear the input information.

## ⑤ REPEAT

Plays all titles/tracks/albums or a single title/chapter/track/album/file repeatedly.

### A-B REPEAT

Specifies the parts you want to play repeatedly

1. During playback, press A-B REPEAT to specify starting point (point A).
2. When you reach the ending point (point B), press it again.

### SLOW

Plays back at 1/2, 1/3, 1/4, or 1/7 of the original speed.

### FRAME II▶

Plays Video frame by frame.

## ⑥ SETUP ⚙

Enters or exits the system setup menu.

**MENU:** Displays the menu.

◀ ▶ ▲ ▼

Selects items, input position, etc.

- For moving the display position of enlarged images
- For rotating JPEG images

### OK

Confirms menu selection.

### RETURN ↶

(DVD disc menu only).

Returns to the previous display.

## ⑦ SCAN ◀◀ ▶▶

Starts fast reverse or fast forward.

### PLAY/PAUSE ▶/⏸

Starts or pauses playback.

### STOP ■

Stops playback.

### SKIP ◀◀ ▶▶

- Skips to previous title/chapter/track or next title/chapter/track.
- Switches the MENU page of VCD equipped with Playback Control (PBC) function.

## ⑧ 0-9

To select title/chapter/track numbers etc.

e.g.,    5:       5  
          15:    1 → 5

### VOL-/VOL+

Decreases/increases the audio output.

 
# USING YOUR DVD PLAYER

## Powering your DVD player

- ① Make sure that your DVD player is connected to power.
- ② Press **⏻** (POWER) button on the top left of your DVD player, or on the remote control, to turn it on. The start-up picture appears on the screen.
- ③ Press **⏻** (POWER) button on the top left of DVD player, or on the remote control, switch the unit to standby mode.

## Playing a DVD or audio CD, or USB

- ① Turn on the TV and select the correct video input.
- ② Press **⏻** to turn on your player.
- ③ Place a disc or connect a USB device.

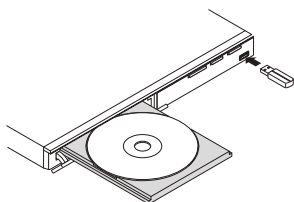

- If this unit is not switched to the USB mode when connecting the USB device, press DISC/USB button on the remote control.
- Depending on the disc, playback may start automatically. (JPEG Only)
- When you press PLAY/PAUSE **▶/||** instead of OK, you can start the slide show.

## Stopping playback

Press **■** (STOP).

The stopped position is memorized.

### Power Resume function

Press PLAY/PAUSE **▶/||** to restart from this position.

This position is memorized even after power outage. However, if the restart position is misaligned or depending on the media and playback conditions, the unit may not operate normally.

## NOTE

- Screen saver will start automatically if the media playback is stopped and the menu is closed for about 5 minutes.
- The player will automatically switch to Power Standby mode if you do not press any buttons for about 25 minutes after the media has stopped playing.

## Controlling DVD or audio CD playback

- Press **■** (STOP) once to stop playback. Your DVD player remembers where you stopped. If you press **▶||**, your DVD player starts playing at the point where you stopped.
- Press **■** (STOP) twice to stop playback. If you press **▶||**, your DVD player starts playing at the beginning of the disc.
- Press **▶||** to pause playback. Press this button again to resume playback.
- Press **▶▶** to fast-forward the disc. Each time you press this button, the fast-forward speed changes from 2 to 4 to 8 to 20 times the normal speed.
- Press **◀◀** to fast-reverse the disc. Each time you press this button, the fast-reverse speed changes from 2 to 4 to 8 to 20 times the normal speed.
- Press **▶▶** (NEXT) to go to the next title, chapter, or track.
- Press **◀◀** (PREV) to go to the previous title, chapter, or track.

## Adjusting the volume

- Adjust the volume of playback by turning it up or down on your dvd player, TV, stereo system, or home theater.

## Programming your DVD player

 
- 1 Insert a disc into the DVD player.
- 2 Press the PROG button on the remote control.
- 3 Select the chapter number you want to play, from the list on the screen.
- 4 Press **▶||** to begin playback.

# CHANGING THE PLAYER SETTINGS

## Using the Setup menus


Your DVD player has a Setup menu you can use to adjust settings.

1. Press **SETUP** on the remote control. The Setup Menu opens on your TV or monitor.

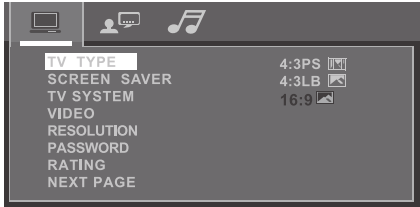

2. Press **◀** or **▶** to highlight one of the three sub-menus, and then press **▼** or **▲** to highlight an option, press **ENTER** or **▶** to select that option.
3. Press **▼** or **▲** to change the setting for that option, then press **OK** to confirm your selection.
4. Repeat Step 2 through Step 3 to change other menu options.
5. Press **SETUP** to exit.

## Setup menu options

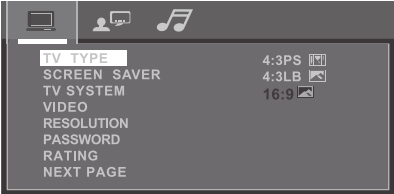 

### General Setup

**TV Type** - Selects the aspect ratio. You can select:

- **4:3/PS** - Select this option when the DVD player is connected to a normal TV (4:3 aspect ratio). Wide-screen images are shown on the screen, but with some parts cropped automatically.
- **4:3/LB** - Select this when the DVD player is connected to a normal TV (4:3 aspect ratio). Wide-screen images are shown on the screen with a black band on the top and bottom.
- **16:9** - Displays the video image full-screen when your DVD player is connected to a widescreen TV (16:9 aspect ratio).

**Screen Saver** - When this option is turned on, your DVD player displays a screen saver when the same image stays on the screen for five minutes.

### TV System

This menu contains the options for selecting the color system that matches the connected TV.

#### PAL

It will change the video signal of an NTSC contents and output it to PAL format.

#### NTSC

It will change the video signal of a PAL contents and output it to NTSC format.

#### AUTO

Select this if the connected TV is compatible with both NTSC and PAL.

**Video—CVBS** - Outputs composite video via VIDEO terminal only.

**Resolution** - Select a video resolution that is compatible with the TV display capability.

 
**Password** - Lets you set the parental control password. The default password is **0000**. You should change the password to a number you can remember.

**Pating** - Blocks DVD playback based on ratings. Select this option to set the parental control level. Options include: **KID SAFE**, **G**, **PG**, **PG 13**, **PGR**, **R**, **Nc17**, and **ADULT**. The default is **ADULT**. Enter the password **0000**.

**Power Resume** - When this option is turned on and you open the disc tray, your DVD player remembers where you stopped. If you close the tray with the same disc loaded, your DVD player starts playing at the point where you stopped.

**Default** - Reset all settings except the password and parental controls back to the factory default.

## Menu and sub-options

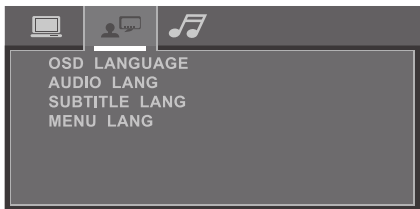

### Language Setup

**OSD Language** - Selects the language for the Setup menu. You can select **English**, **German**, **Spanish**, **French**, **Italian** or **Portuguese**.

EN

# CHANGING THE PLAYER SETTINGS (Cont.)

---

**Audio** - Selects the audio language. If the language you select is not recorded on the DVD, your DVD player plays the default audio language.

**EN** **Subtitle** - Select the subtitle language. If the language you select is not recorded on the DVD, your DVD player displays the default subtitle language.

**Menu Lang** - Selects the DVD menu language. If the language you select is not recorded on the DVD, your DVD player displays the default language.



## Audio Setup

### Audio Out

- SPDIF / RAW: Loops through original digital audio (Bitstream).
- SPDIF / PCM: Selects this if you connect the player to a **TV** that is not compatible with digital signals.

### HDMI AUDIO

- AUTO: It will detect whether the connected receiver or **TV** supports the movie soundtrack format, and output **BITSTREAM** without any processing if it supports the format, or **PCM** as processed audio ready for any receiver if it does not support it.
- PCM: Outputs the signal as processed audio ready for any receiver. Use this when your receiver or **TV** cannot decode the movie soundtrack on the disc.

**KEY**-Select your favorite key of audio outputs.

**DOWNMIX** - Select how the player downmixes multi-channel audio to stereo output:

- LT/RT-2-channel output, main channel with surround.
- STEREO-2-channel output, main right channel with right surround and main left channel with left surround.

## TROUBLESHOOTING

Please check for causes of problems in accordance with the following chart before contacting any maintenance personnel.

Symptom	What to check
The player does not play.	<ul style="list-style-type: none"><li>- If disc is loaded in.</li><li>- If disc is loaded upside down.</li><li>- If disc is dirty or warped.</li><li>- If water condensation has occurred. If it occurs, take out disc and leave the player on for a few hours until it backs to normal.</li></ul>
There is no sound.	<ul style="list-style-type: none"><li>- If the system connection is correct.</li><li>- If the power of speakers is turned on.</li><li>- Make sure the input for the TV and stereo system are correct.</li><li>- If the sound setup of DVD disc is correct.</li><li>- If disc is dirty or warped.</li></ul>
There is no picture.	<ul style="list-style-type: none"><li>- If TV is turned on and is in correct video mode.</li><li>- If system connection is correct.</li></ul>
Poor AV performance.	<ul style="list-style-type: none"><li>- If disc is dirty, warped or damaged.</li></ul>
Cannot continue to play and play a section repeatedly.	<ul style="list-style-type: none"><li>- If it is in A-B repeat status. If it is true, press A-B button to cancel.</li><li>- If disc is dirty or damaged. If it is true, clean it or skip the section.</li></ul>
The remote control does not work.	<ul style="list-style-type: none"><li>- If there are obstructions between the remote control and the player.</li><li>- If the remote control is pointing at the player.</li><li>- If batteries are inserted or the polarity is correct.</li><li>- If batteries are weak.</li></ul>

### **Note:**

Static or other external interference may cause the abnormality of the player. At this circumstance, unplug the power - supply cord from the outlet and plug it in again to reset the player so that the normal operation will be resumed. If you are still having problems, then please disconnect the power and consult your service center or a qualified technician.

# SPECIFICATIONS

EN

Laser Wavelength		Wavelength: 780/650nm
Video System		PAL/Auto/NTSC
Frequency Response		20Hz-20Khz ±2.5dB
Audio S/N Ratio		≥ 85dB
Audio distortion + noise		≤ -70(1KHz)
Channel Separation		≥ 70dB(1KHz)
Dynamic Range		≥ 80dB(1KHz)
Audio Output	Analog Audio Out	Output Level:2 V ± $\begin{smallmatrix} 0,2 \\ 1,0 \end{smallmatrix}$ , Load: 10kΩ
	Digital Audio Out	Coaxial
Video Output	Video Out	Out Level:1 Vp-p ± 0.2, Load: 75Ω Unbalanced Negative
	HDMI	Yes
Power Source		AC 100-240V, 50/60Hz
Power Consumption		≤6W

**DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.**



# Warranty Card

Dear Valued Customer, **Thank you for choosing LONPOO**

1. If you are not satisfied with our product and only want to return for refund, please contact Amazon and they will assist you as your order has 30 days' period of money back guarantee. If the product just seems defective, please CONTACT US first and we will try our best to help you.

-----

2. Warranty time: You got 12 months!

Having problems with this product? You have two choices:

1) Contact us through the Amazon Buyer-Seller Messages and we will provide support within 24 hours.

2) You can also email us directly with your order ID and description of problem at: [Service@lonpoo.com](mailto:Service@lonpoo.com)

Attention: natural disasters, incorrect use, unauthorized repairs, damages are not in warranty.

-----

3. In LONPOO, we strive to bring more satisfactory products to our valued customers and make them have a great experience, not only for pre-sale but also in post-sale aspect. As we have a whole team of customer service standing behind our products. Our extensive Customer service team will solve your product issues with satisfied solutions, answer any questions and effectively process return & replacement.

-----

If you are satisfied with our products and service, please rate us with 5 stars review and feedback! Your support means a lot to us and will help us bring more good products in return to you.

Question?

Contact Lonpoo: [service @lonpoo.com](mailto:service@lonpoo.com)

Always there to support you

Get support at:  
[www.lonpoo.com](http://www.lonpoo.com)

Question?  
Contact lonpoo:  
[service@lonpoo.com](mailto:service@lonpoo.com)